



DVD/VCR located behind WALLBOX door

COMPUTER located in separate wallbox enclosure

PLEASE NOTE:
To prevent injury or property damage, do **NOT** sit on or lean against the WALLBOX or the COMPUTER enclosure

- 1a** LAPTOP presentation: insert A126 key and turn on projector. Key to remain in position until end of presentation.
- OR
- 1b** DVD/VCR playback: insert Y11 key to open WALLBOX door. Alternately, LAPTOP presentation option may be selected with WALLBOX door open.

If equipped, the auto power screen will roll down or retract when projector is powered on or off or the wallbox is closed

- 2** Press "ON" to power on projector.
- 3** "PIC MUTE" temporarily blacks out displayed image. Press again to resume display.
- 4** VOLUME adjusts classroom volume.
- 5*** Auto power projection screen controls shown. *Controls may be located off to side of main panel.

WALLBOX PC

PC Press "PC"

Your LOGIN →

Your PASSWORD →

Log on to: ID
How do I log on to another domain?

Typically, your login is the first initial of your first name, followed by your full last name. Passwords are the client's responsibility and must be reset by Media if forgotten.

Optional: insert USB drive into one of four available USB slots on the faceplate. Remove drive after logging off.

Optional: insert CD/DVD-ROM into drive, located on the faceplate of the PC WALLBOX. Eject disc when finished.

For best results, we recommend VLC for playback of CDs and DVDs.

Log off account when finished.

LAPTOP

LAPTOP Press "LAPTOP"

Connect data display cable. Mac users must provide own adapter.

Connect classroom network cable. Laptop must be configured to access DHCP networks.

Connect laptop audio cable.

Your laptop may require toggling screen modes to display on projector. Simultaneously depress then release the keys labeled "Fn" and "CRT/LCD" ("F8" commonly) on your laptop keyboard until desired projection appears.

PLEASE NOTE:
To conserve projector lamp life, close WALLBOX door or press display "OFF" when finished.

DVD / VCR

DVD / VCR Open WALLBOX. Press "DVD/VCR"

Insert disc (Region 1/All, retail, NTSC) or tape (VHS, NTSC) into DVD/VCR. Non-US standard or recorded media may require assistance from Media Equipment.

Check DVD/VCR deck for current playback mode. Press "DVD/VCR" or "DVD" or "VIDEO" to change playback mode.

Please return DVD/VCR remote to top of WALLBOX when finished.

Eject disc or tape from DVD/VCR unit when finished.

MEDIA SUPPORT

Media intercom phone (near WALLBOX): lift receiver to call, hang up when finished. Or, call Media Equipment, via mobile, at 805-893-3549. We are located at T160 Kerr Hall.