


CONTROLS

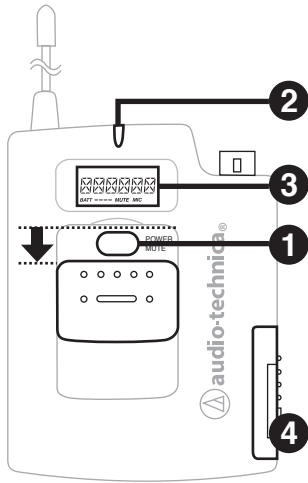

1 Slide cover down to reveal POWER/MUTE button.


Press & hold POWER/MUTE until red LED **2** illuminates.
 Repeat to power off mic.
 Please power off mic after each class.
 Press & release POWER/MUTE to mute mic.
 Repeat to resume mic operation.

2 Red LED indicator.

3 Display.

4 Hinged battery cover.

DISPLAY

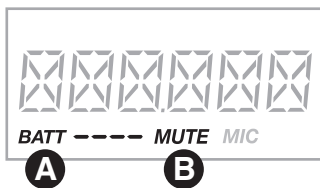


If battery strength indicator **A** on FUNCTION display is down to one bar, replace batteries.

If MUTE **B** appears on FUNCTION display, MUTE is enabled.

Press & release POWER/MUTE **1** to disable MUTE.

BATTERIES

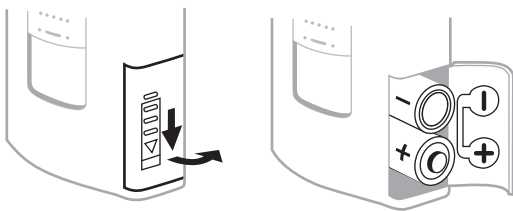


Battery removal & replacement.

Note battery polarity.

Additional "AA" batteries located in podium drawer.
 If battery supply is exhausted, contact MEDIA.

MEDIA SUPPORT

 Media intercom phone (on PODIUM or nearby wall): lift receiver to call, hang up when finished.
 Or, call Media Equipment, via mobile, at 805-893-3549.
 We are located at 1160 Kerr Hall.